
Documentation Update

976-2101-01-01
Rev A

Conext™RL Photovoltaic Grid Tie Inverters

DANGER

RISK OF FIRE, ELECTRIC SHOCK, EXPLOSION, AND ARC FLASH

This Documentation Update is in addition to, and incorporates by reference, the relevant product manuals for each product in the Conext RL Photovoltaic Grid Tie Inverters. Before reviewing this Documentation Update you must read the relevant product manuals, (Installation and Operation Manual 975-0687-01-01 Rev A and Rev B). Unless specified, information on safety, specifications, installation, and operation is as shown in the primary documentation received with the product. Ensure you are familiar with that information before proceeding.

Failure to follow these instructions will result in death or serious injury.

Summary of Changes

On page 3-5, under the section “Startup Menu”, for the Install Settings, the following details are added for more clarity.

Startup Menu

When the inverter is energized and turned on for the first time, the Select Country screen is displayed with country setting as "Default".

- To start the Install Settings, hold both the SEL and ENT buttons simultaneously for more than 10 seconds. The inverter then shows "INVERTER SHUTDOWN."
- Follow the steps shown in Figure 3-4 in the Installation and Operation Manual to complete the initial configuration.
- To access the Install Settings Menu for future changes, a qualified personnel password is required. Contact Schneider Electric customer service to get the qualified personnel password.

The figure below shows Selecting the country at the time of installation.

